



- NOTES**
1. Refer to the wiring diagram sticker (on the back of the front plate) for how to use the BSI-BS3 and DS1 switches.
 2. When operating, do not short-circuit protection device(s) S1PH, S1PL and Q1E.
 3. Refer to the combination table and the option manual for how to connect the wiring to X6A, X28A and X77A.
 4. Colours: BLK: Black, RED: Red, BLU: Blue, WHT: White, GRN: Green.

Part n°	Description
A1P	Printed circuit board (main)
A2P	Printed circuit board (noise filter)
BS1-BS3 (A1P)	Push-button switch
C1~C5 (A1P)	Capacitor
DS1 (A1P)	Dipswitch
E1H	* Bottom plate heater
F1U (A2P)	Fuse T 6,3 A 250 V
F2U, F3U (A2P)	Fuse T 30 A 500 V
F6U (A1P)	Fuse T 6,3 A 250 V
F7U (A1P)	Fuse T 5 A 250 V
F8U, F9U	Fuse T 1 A 250 V
HAP (A1P)	Light-emitting diode (service monitor is green)
K1M, K3M (A1P)	Magnetic contactor
K1R (A1P)	Magnetic relay (Y1S)
K2R (A1P)	Magnetic relay (Y2S)
K4R (A1P)	Magnetic relay (E1H)
K10R K13R-K15R (A1P)	Magnetic relay
L1R	Reactor
M1C	Compressor motor
M1F, M2F	Fan motor
PS (A1P)	Switching power supply
Q1DI	Earth leakage circuit breaker (30mA)
Q1E	Overload protection
R1~R8 (A1P)	Resistor
R1T	Thermistor (air)
R2T	Thermistor (discharge)
R3T	Thermistor (suction)
R4T	Thermistor (heat exchanger)
R5T	Thermistor (heat exchanger middle)
R6T	Thermistor (liquid)
R7T	Thermistor (fin)
S1PH	High pressure switch
S1PL	Low pressure switch
SEG1~SEG3 (A1P)	7-segment display
TC (A1P)	Signal transmission circuit
V1D, V2D (A1P)	Diode
V1R, V2R (A1P)	Diode module
V3R~V5R (A1P)	IGBT power module
X1M	Terminal strip
Y1E, Y3E	Electronic expansion valve
Y1S, Y2S	Solenoid valve (4-way valve)
Z1C~Z5C	Noise filter (ferrite core)
Z1F~Z4F (A1P-A2P)	Noise filter
L*A, L*B, NA, NBE*, U, V, W, X*A (A1P, A2P)	Connector