

NOTES:

- 1. TERMINAL BLOCK, O: CONNECTOR, FIELD WIRING
- 2. IN CASE OF SIMULTANEOUS OPERATION INDOOR UNIT SYSTEM, SEE THE INDOOR UNIT WIRING ONLY.
- 3. FOR DETAILS, SEE WIRING DIAGRAM ATTACHED TO THE OUTDOOR UNIT.
- IN CASE OF USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
- IN CASE OF SIMULTANEOUS OPERATION SYSTEM, CONNECTED QUANTITY OF THE INDOOR UNITS VARIES ACCORDING TO THE CONNECTED OUTDOOR UNIT.
- 6. IN CASE OF MAIN/SUB CHANGEOVER, SEE INSTALLATION MANUAL ATTACHED TO THE REMOTE CONTROLLER.
- SHOWN ONLY IN CASE OF PROTECTION PIPING, USE H07RN-F IN CASE OF NO PROTECTION.
 X24A, X33A, X35A, X39A, X70A, X81A ARE CONNECTED WHEN OPTIONAL ACCESSORIES ARE BEING
- USED, SEE WIRING DIAGRAM OF THIS ACCESSORY.
- 9. CONNECT POWER OF ADAPTER FOR WIRING TO TERMINAL BLOCK (X2M) OF INDOOR UNIT DIRECTLY. 10. FUSE F1U ON MAIN PCB (A1P) IS PRESENT ONLY IN FOLLOWING UNITS: FCAG 35, 50, 60, 71.
- IN CASE OF SIMULTANEOUS OPERATION SYSTEM (NOTE 5)

REMOTE CONTROLLER

X2M

X2M

X2M

WIRE COLORS
BLK: BLACK
BLU: BLUE
YLW: YELLOW
BRN: BROWN
PNK: PINK

INDOOR UNIT		H2P	PILOT LAMP (TIMER: GREEN)
A1P	MAIN PCB	H3P	PILOT LAMP
C105	CAPACITOR		(FILTER SIGN: RED)
DS1	DIP SWITCH ON PCB	H4P	PILOT LAMP
F1U	FUSE (T, 3.15A 250V)		(DEFROST: ORANGE)
HAP	FLASHING LAMP	H5P	PILOT LAMP
	(SERVICE MONITOR: GREEN)		(ELEMENT CLEANING: RED)
K2R	MAGNETIC RELAY	H6P	PILOT LAMP (TIMER: GREEN)
M1P	MOTOR (DRAIN PUMP)	SS1	DIP SWITCH (MAIN / SUB)
M1F	MOTOR (INDOOR FAN)	SS2	DIP SWITCH
M1S-M4S	MOTOR (SWING BLADE)		(WIRELESS ADDRESS SET)
R1	RESISTOR	ADAPTOR FOR WIRING	
R1T	THERMISTOR (AIR)	A7P	ADAPTER PCB
R2T, R3T	THERMISTOR (COIL)	F1U	FUSE (5A, 250V)
S1L	FLOAT SWITCH (DRAIN PUMP)	F2U	FUSE (5A, 250V)
V1R	DIODE BRIDGE	KHuR	MAGNETIC RELAY
V2R	IGBT POWER MODULE	KCR	MAGNETIC RELAY
X15-901A	CONNECTOR	KFR	MAGNETIC RELAY
X1M	TERMINAL BLOCK	X1-2A	CONNECTOR
	(REMOTE CONTROLLER)	CONNECTORS FOR OPTIONAL PARTS	
X2M	TERMINAL BLOCK	X24A	CONNECTOR
	(POWER SUPPLY)		(WIRELESS REMOTE CONTROLLER)
	FERRITE CORE	X33A	CONNECTOR
Z1F	NOISE FILTER		(ADAPTOR FOR WIRING)
PS	POWER SUPPLY CIRCUIT	X35A	CONNECTOR
RC	SIGNAL RECEIVER CIRCUIT	X39A	(AUTO CLEAN PANEL)
TC	SIGNAL TRANSMISSION CIRCUIT	X70A	(AUTO GELANT FAINEE)
NE	NOISELESS EARTH	X50A	CONNECTOR (WI-FI ADAPTOR)
	SENSOR KIT	X81A	CONNECTOR (SENSOR KIT)
A3P, A4P SENSOR KIT PCB			WIRED REMOTE CONTROLLER
WI	RELESS REMOTE CONTROLLER	R1T	THERMISTOR (AIR)
(RECEIVER / DISPLAY UNIT)		HUMIDITY SENSOR	
A5P	RECEIVER PCB	A2P	SENSOR PCB
A6P	DISPLAY PCB	S1RH	HUMIDITY SENSOR
BS1	PUSH BUTTON (ON/OFF)	CN1	CONNECTOR
X1-2A	CONNECTOR		
H1P	PILOT LAMP (ON: RED)		