


FNA25-60A9

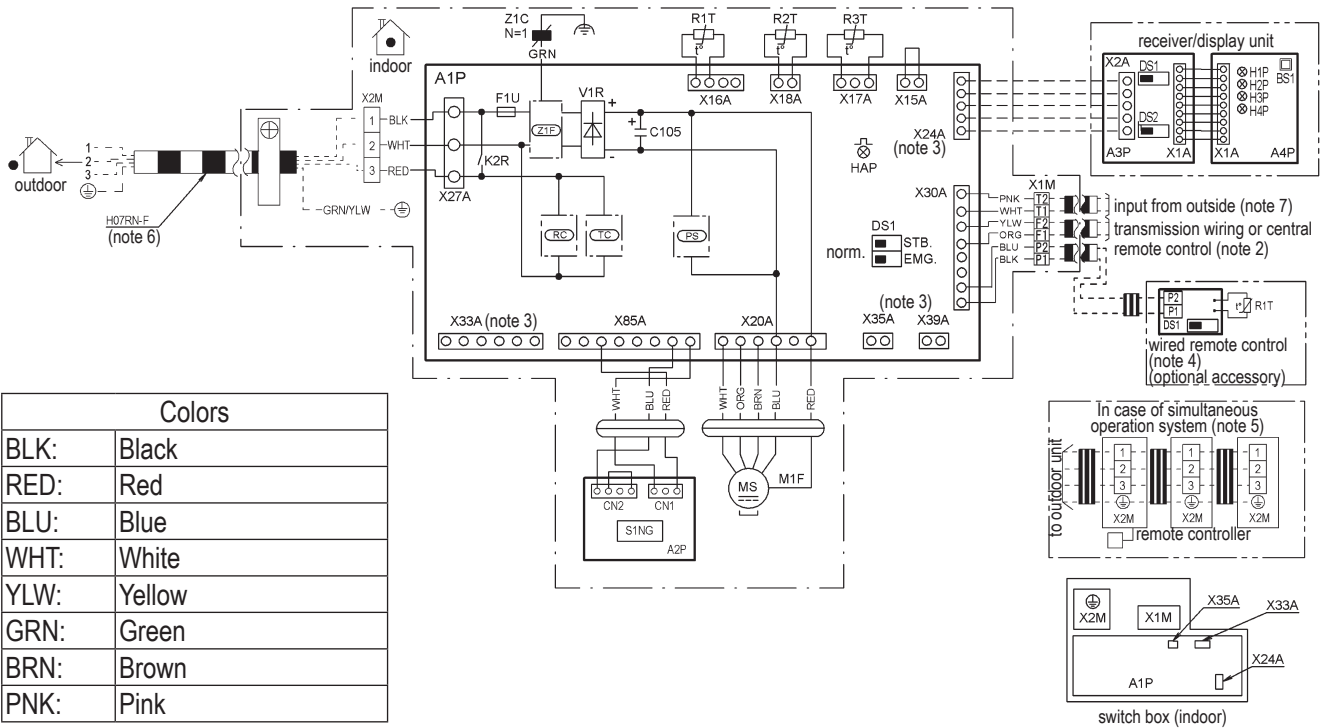

Colors	
BLK:	Black
RED:	Red
BLU:	Blue
WHT:	White
YLW:	Yellow
GRN:	Green
BRN:	Brown
PNK:	Pink

Indoor unit		Z1F	Noise filter
A1P	Printed circuit board	Receiver/display unit	
A2P	Gas sensor board	A3P	Printed circuit board
C105	Capacitor	A4P	Printed circuit board
F1U	Fuse (F, 3.15A, 250V)	H1P	Light emitting diode (on-red)
K2R	Magnetic relay	H2P	Light emitting diode (filter sign-red)
PS	Power supply circuit	H3P	Light emitting diode (timer-green)
RC	Receiving unit	H4P	Light emitting diode (defrost-orange)
TC	Transmission circuit	DS1	Selector switch (main/sub)
HAP	Light emitting diode (service monitor-green)	DS2	Selector switch (wireless address set)
M1F	Motor (fan)	BS1	Push button (on/off)
R1T	Thermistor (air)	Connector for optional parts	
R2T, R3T	Thermistor (coil)	X24A	Connector (infrared remote control)
DS1	Selector switch (emergency)	X33A	Connector (adapter for wiring)
V1R	Diode bridge	X35A	Connector (adapter power supply)
X1M	Terminal strip (control)	Wired remote control	
X2M	Terminal strip (power supply)	R1T	Thermistor (air)
Z1C	Ferrite core (noise filter)	SS1	Selector switch (emergency)

NOTES

- : terminal block, □○□: connector, ::■■■■::: field wiring, •: wire clamp, ⊕: protective earth (screw)
- In case of using central remote control, connect it to the unit in accordance with the attached installation manual.
- X24A, X33A, X35A, X39 are connected when the optional accessories are being used.
- For change over of BRC1E type main/sub refer to manual attached to remote control.
- Show only in case of protected pipes. Use H07RN-F in case of no protection.
- For detail, see wiring diagram attached to outdoor unit.
- When connecting the input wires from outside, forced OFF or ON/OFF control operation can be selected by the remote control, see manual for detail.